

Phazer Auto-Dimming Module

Installation of this module will automatically activate the Nighttime Dim feature of your lightbar when it is dark out.



Requirements:

- The Phazer lightbar cannot have a metal block off plate installed in the selected mounting location.
- The Phazer lightbar MUST have a wire programmed for DIM enable.

Installation:

1. Select a location inside the lightbar that has exposure to the daylight, but is NOT in front of any of the light heads inside the bar.
2. Remove the lens over this area, and if applicable, also the dome over the section of the lightbar that covers the wire exit holes.
3. Use isopropyl alcohol to clean the mounting surface and ensure it is fully dry.
4. Install the module with the light sensor facing upwards using the enclosed double sided VHB tape.
5. Attach the black Ground wire and ring terminal using the enclosed screw. Place the tooth washer between the ring terminal and the metal extrusion. (*Wiggle the ring terminal to ensure it is tight.*)
6. Attach the red Power wire to the incoming Power wire from the wire harness. (*Ensure any connection you loosen are fully secured.*)
7. Cut the Dim Enable wire from the harness (*typically purple*) and use the butt splice to connect it to the purple wire from the module.

